

Инструкция по установке

KIA SPORTAGE

(2015-2018, 2018-2022)




HYUNDAI TUCSON

(2015-2018, 2018-2021)
















Арт.: F.2811.001


 1550 kg	 75 kg	 $D \text{ (kN)} = \frac{\text{MAX kg} \times \text{MAX kg}}{\text{MAX kg} + \text{MAX kg}} \times 0,00981$  $\text{MAX kg} + \text{MAX kg}$
$D = 9 \text{ kN}$		

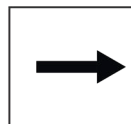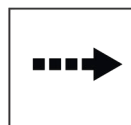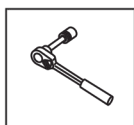

Используемый инструмент:

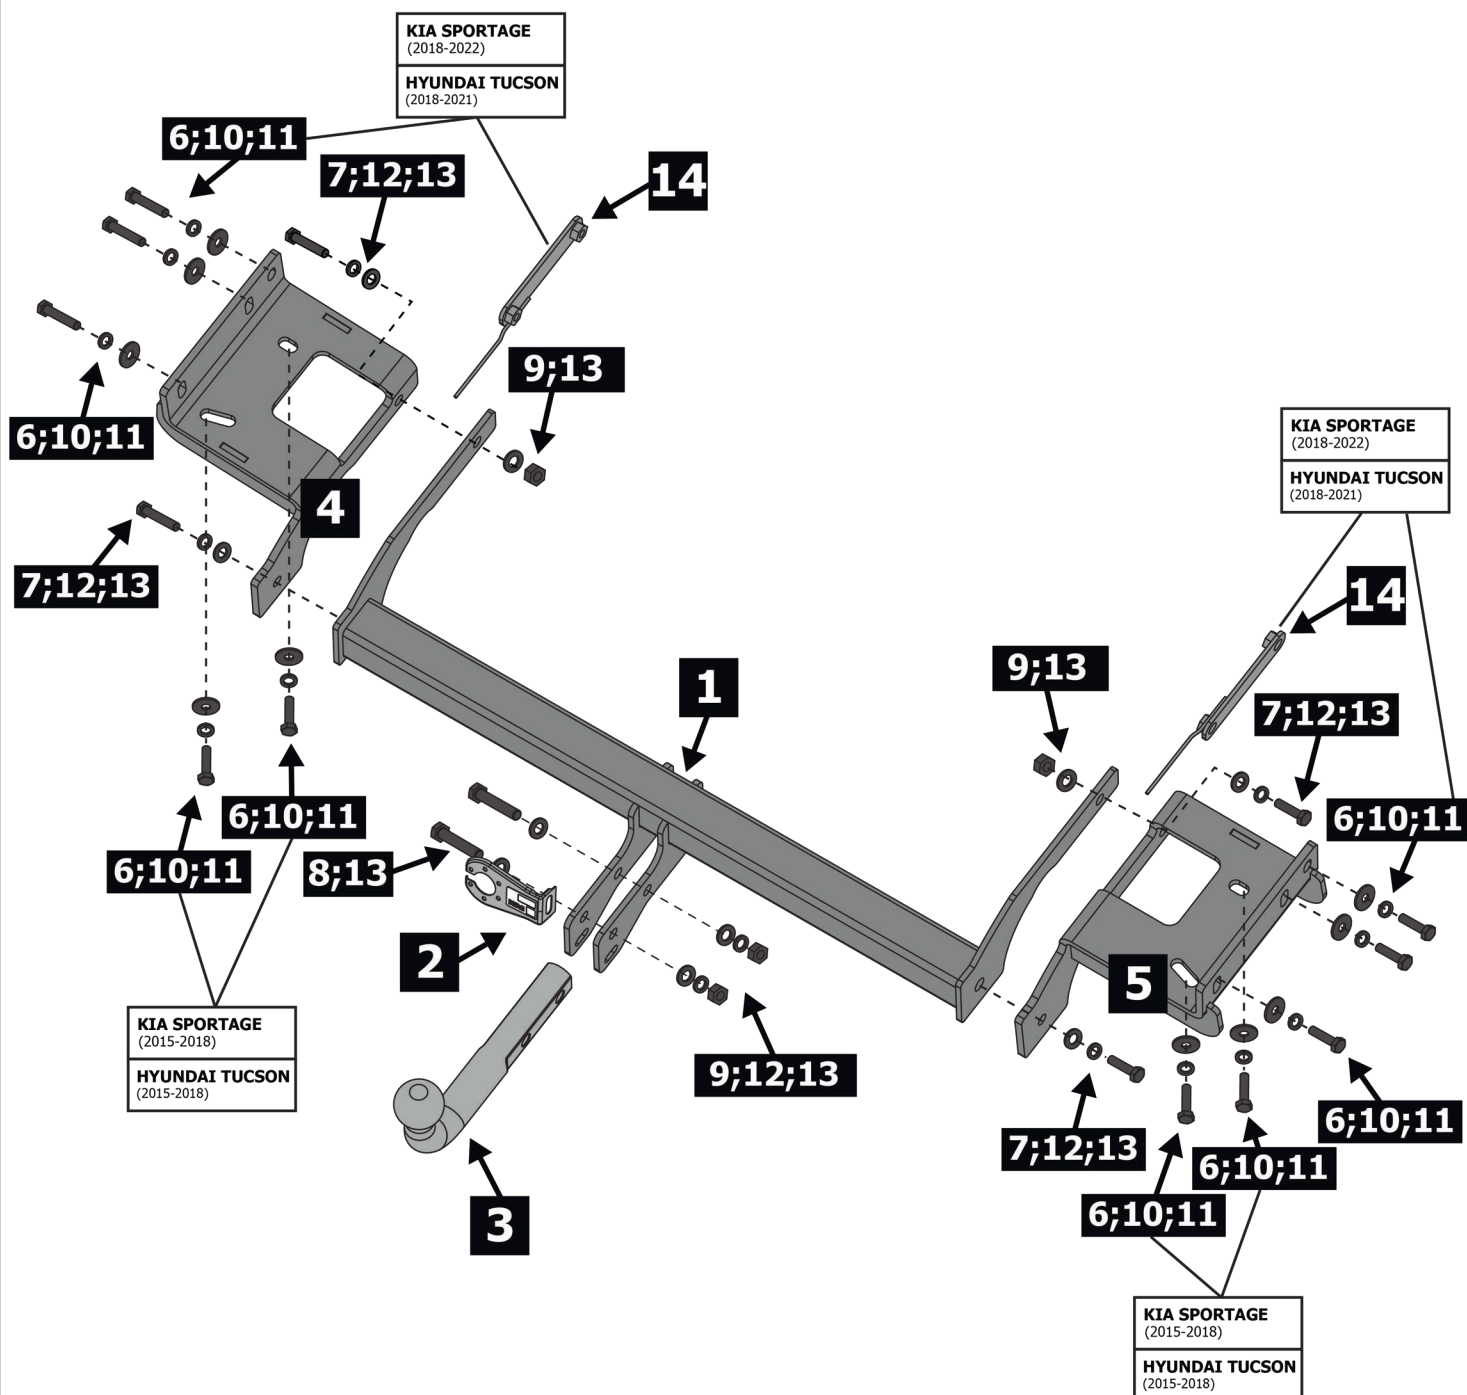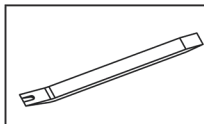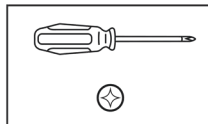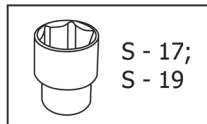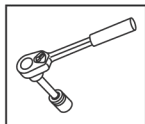

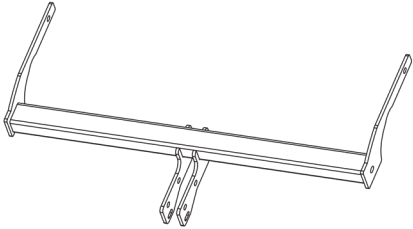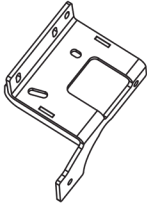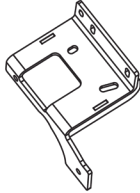1	x1	Балка	
2	x1	Кронштейн под розетку	
3	x1	Крюк	
4	x1	Кронштейн левый	
5	x1	Кронштейн правый	
6	x10	M10x1.25x35	
7	x4	M12x1.25x40	
8	x2	M12x1.25x70	
9	x4	M12x1.25	
10	x10	Ø 10	
11	x10	Ø 10	
12	x6	Ø 12	
13	x10	Ø 12	
14	x2	Гайка закладная	

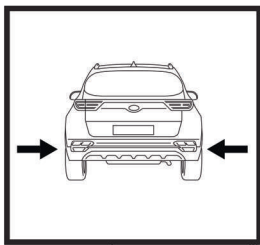


KIA SPORTAGE
(2018-)


HYUNDAI TUCSON
(2018-)

All models


3x

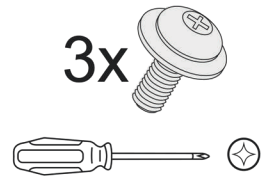


All models
only right hand

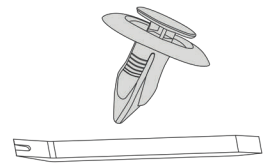

Hyundai Tucson

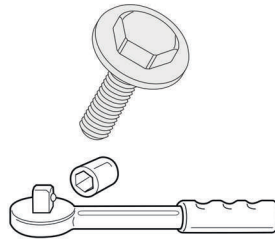

Kia Sportage

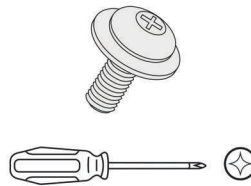

1

3x



3x





2




3

4


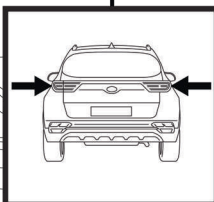


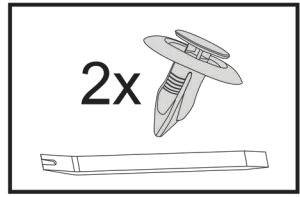


5

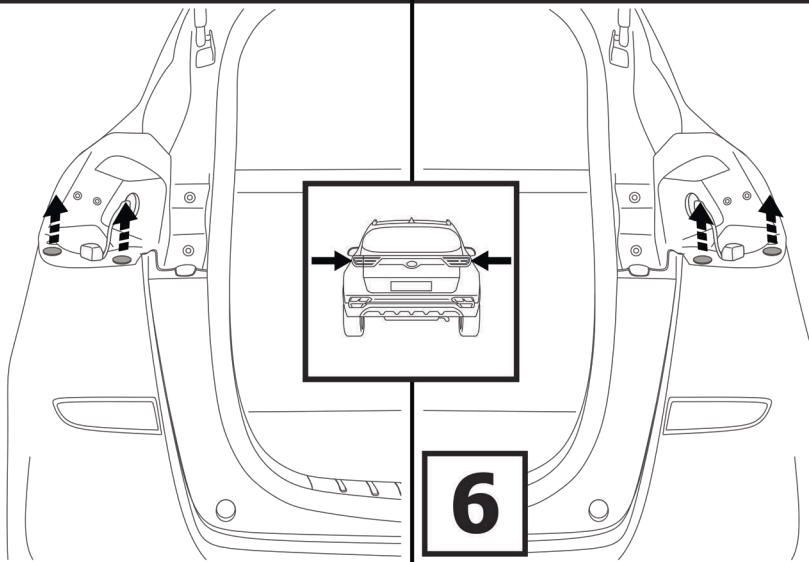


6

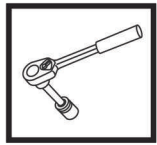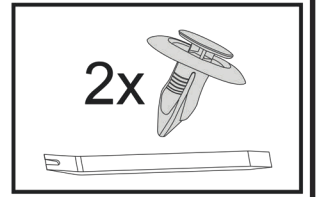


7

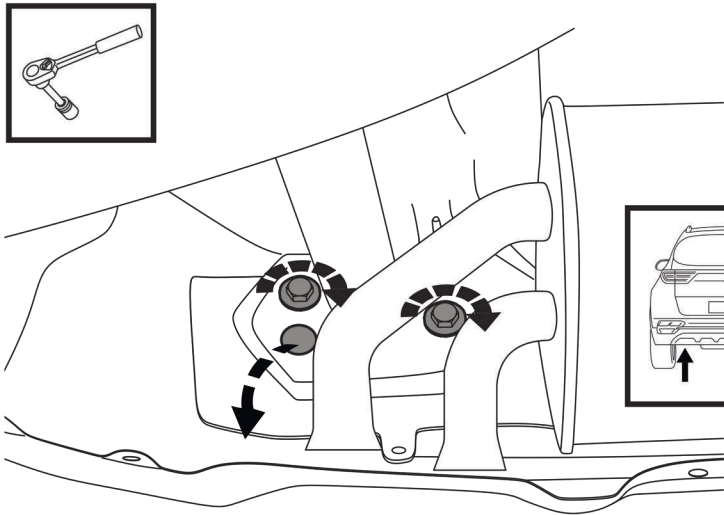


8

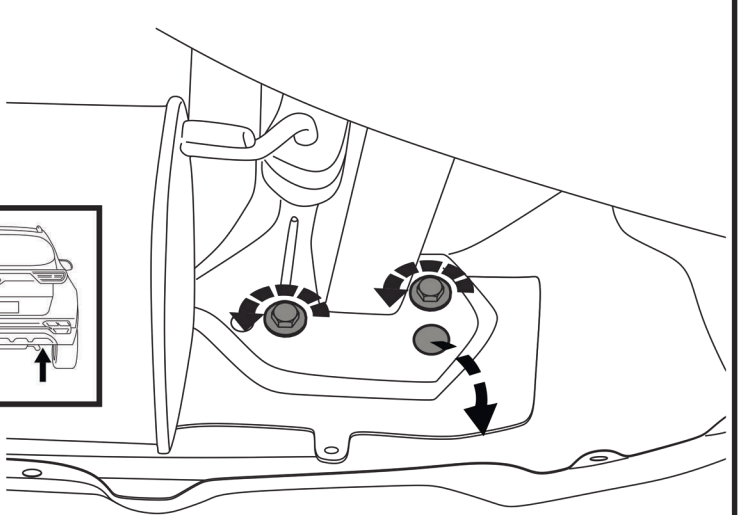


9

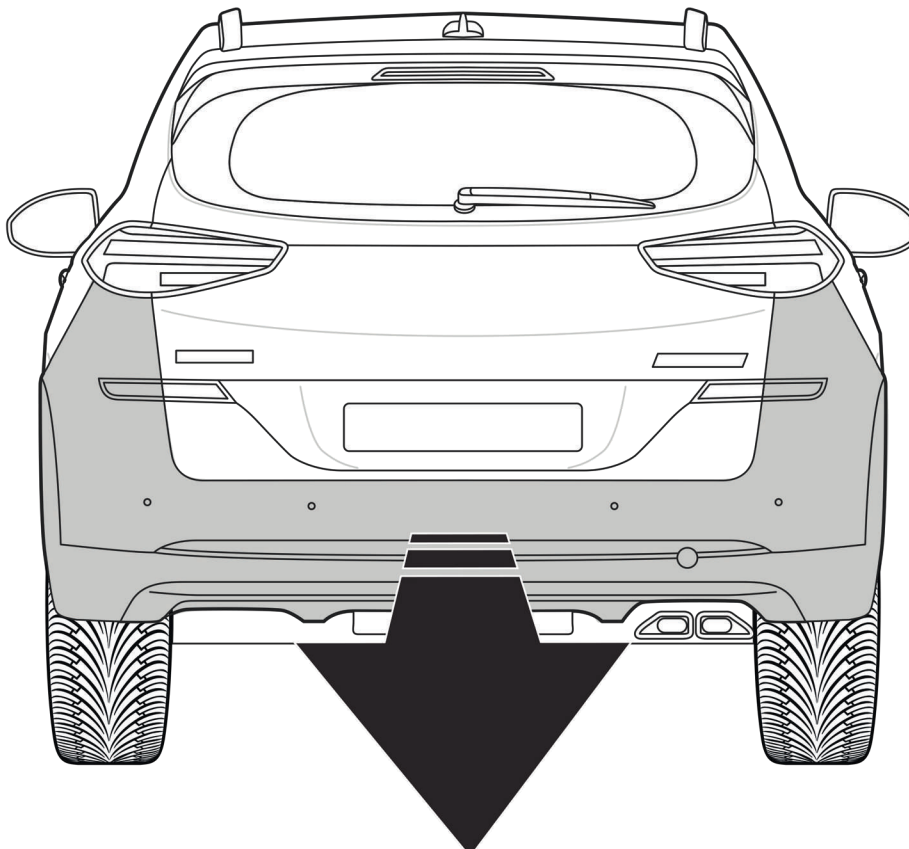

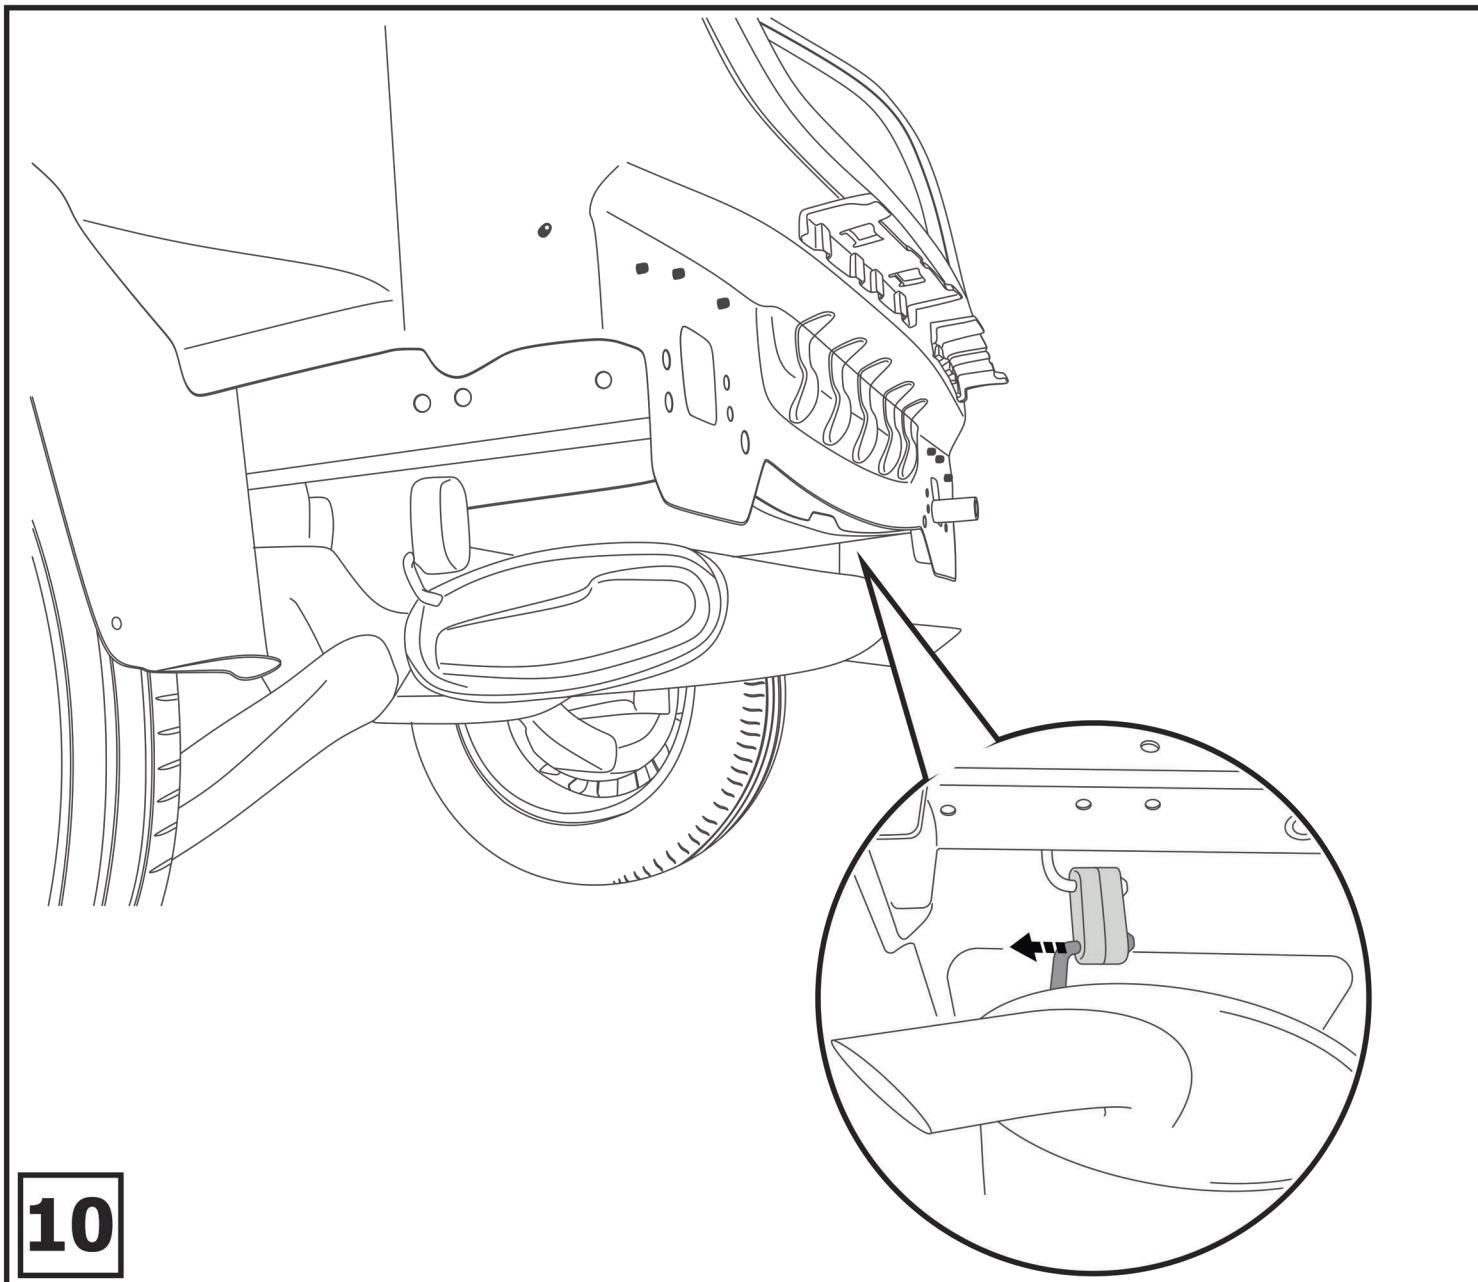



10

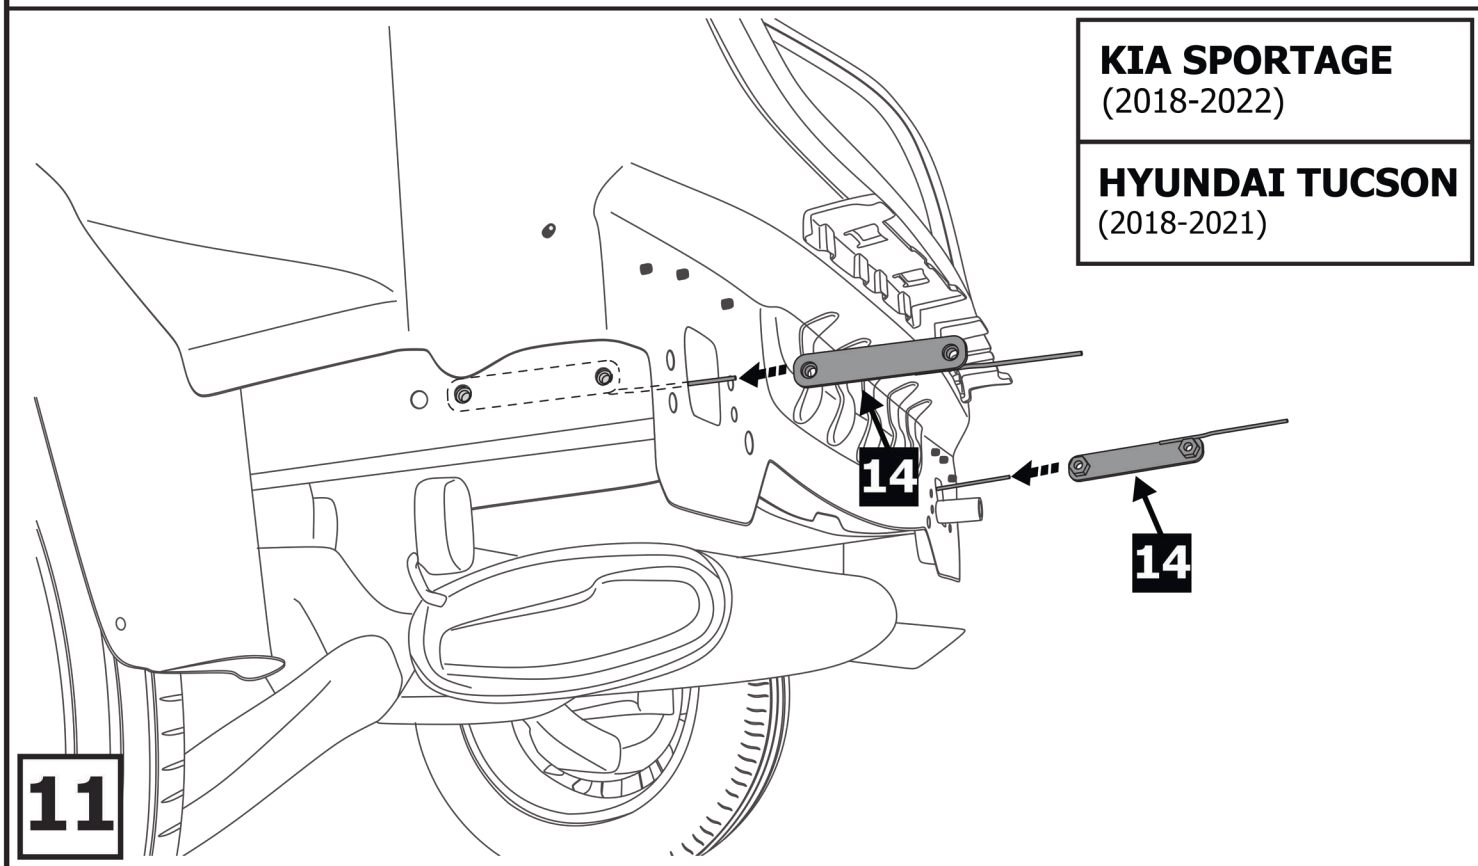


KIA SPORTAGE
(2018-2022)


HYUNDAI TUCSON
(2018-2021)

11

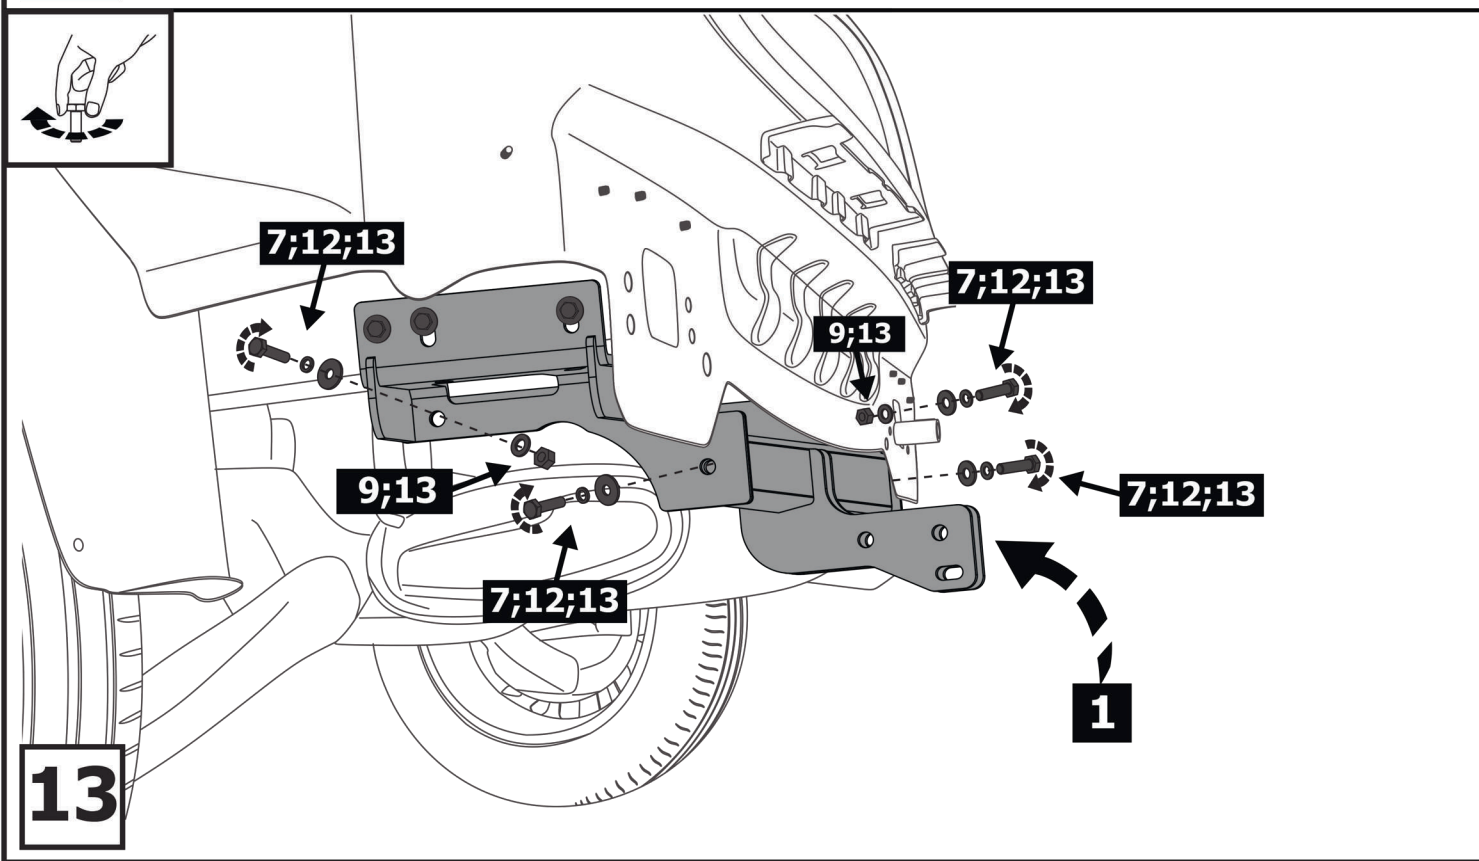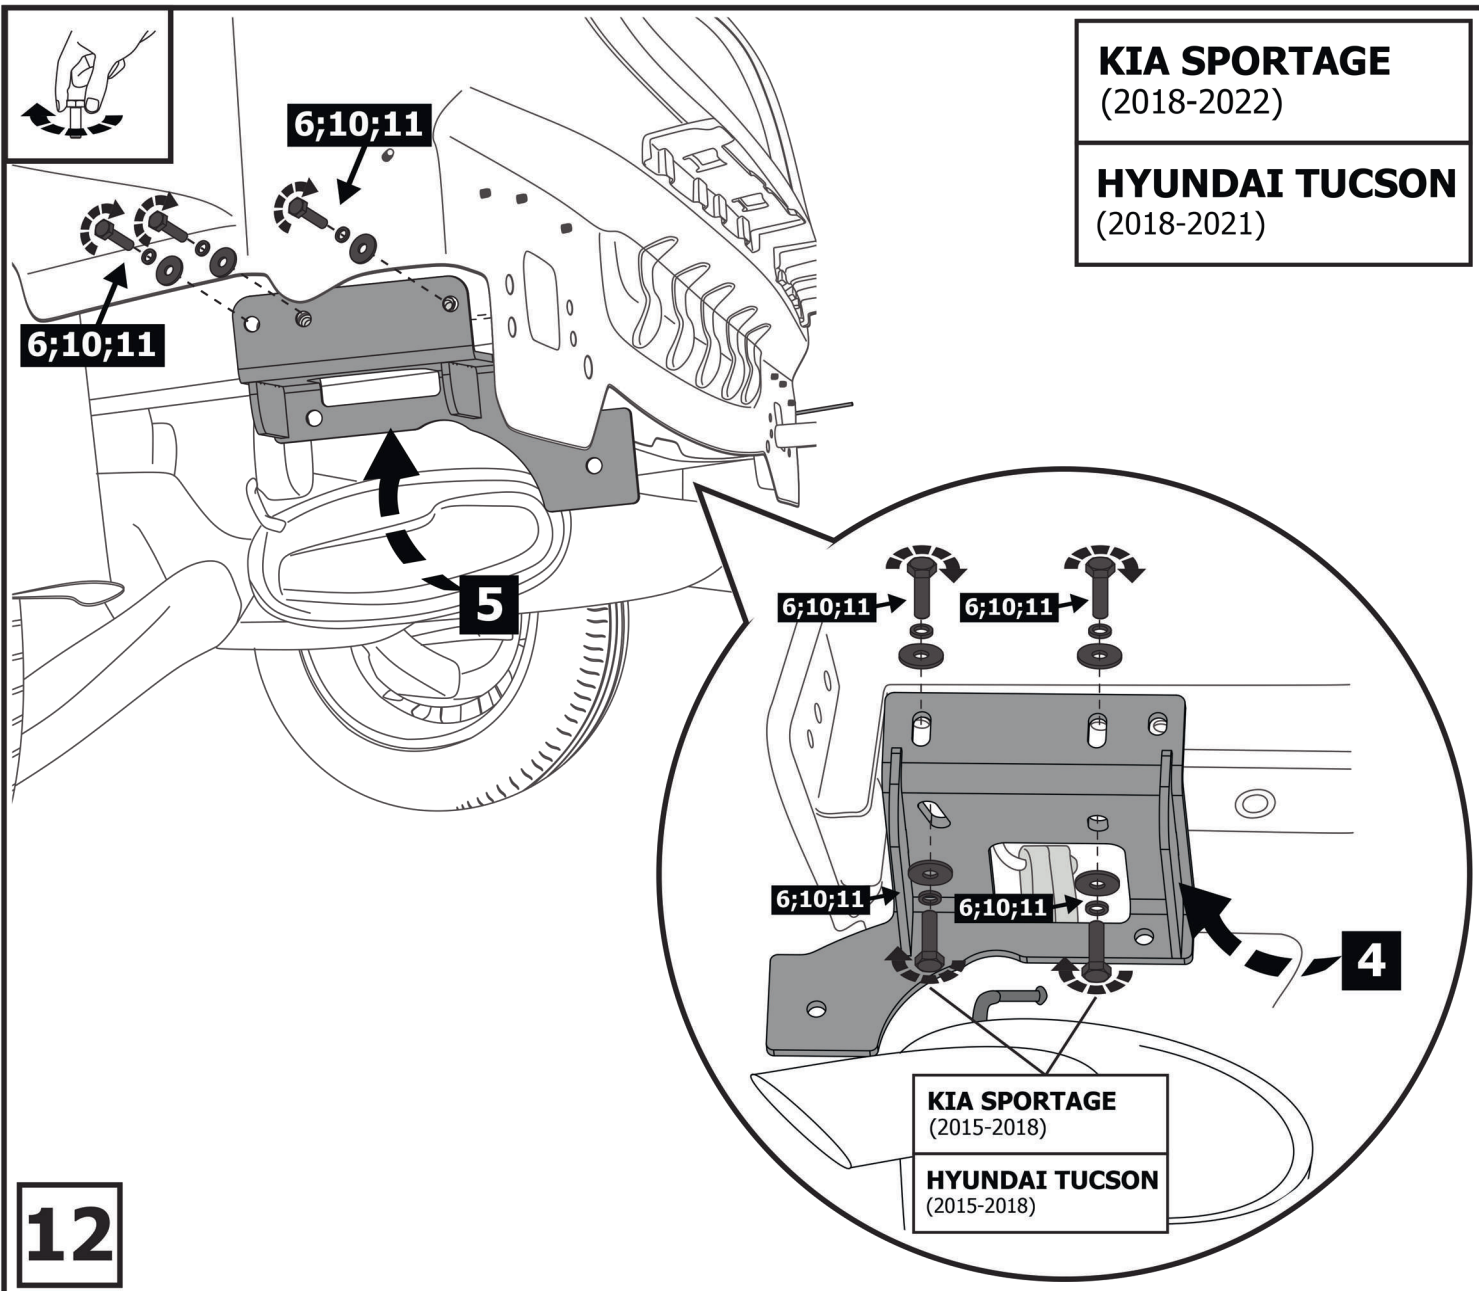


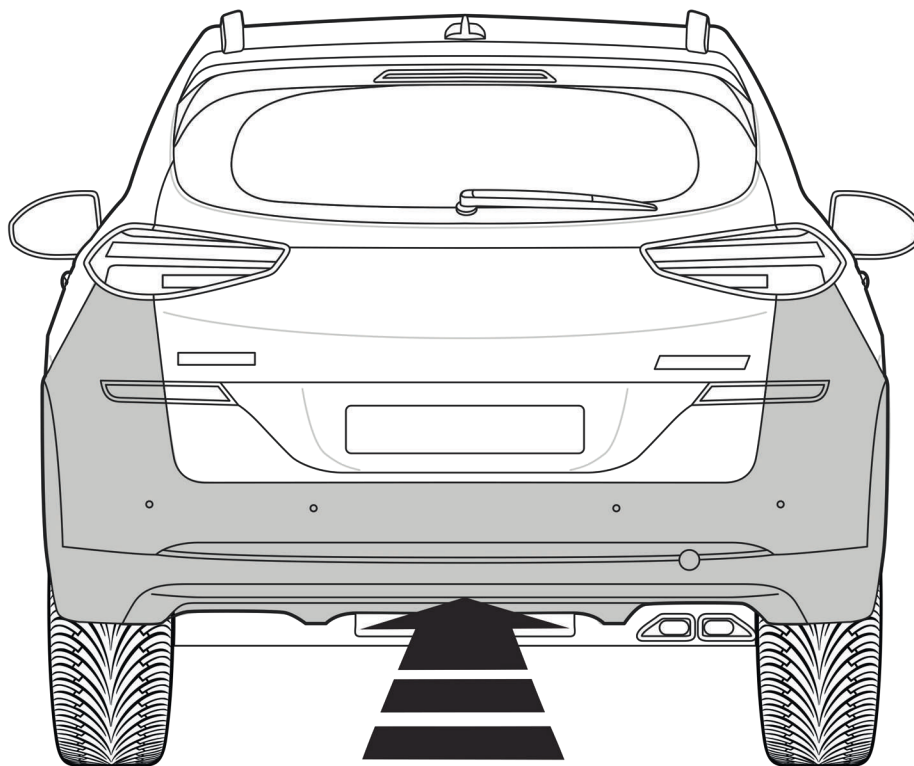

14

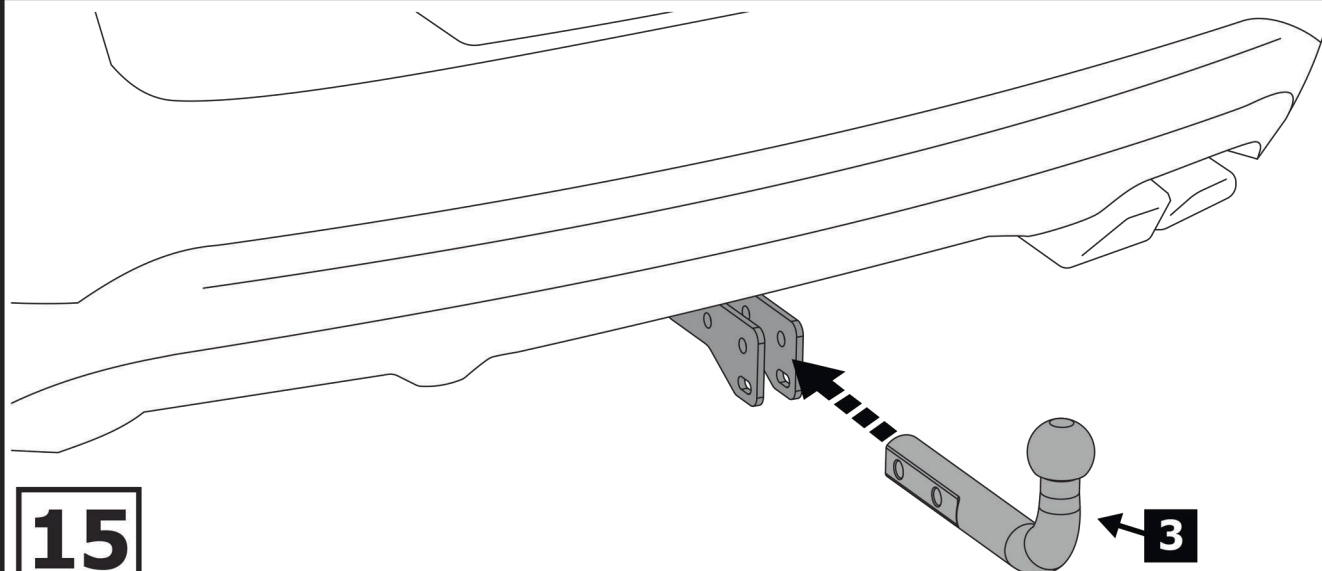

15

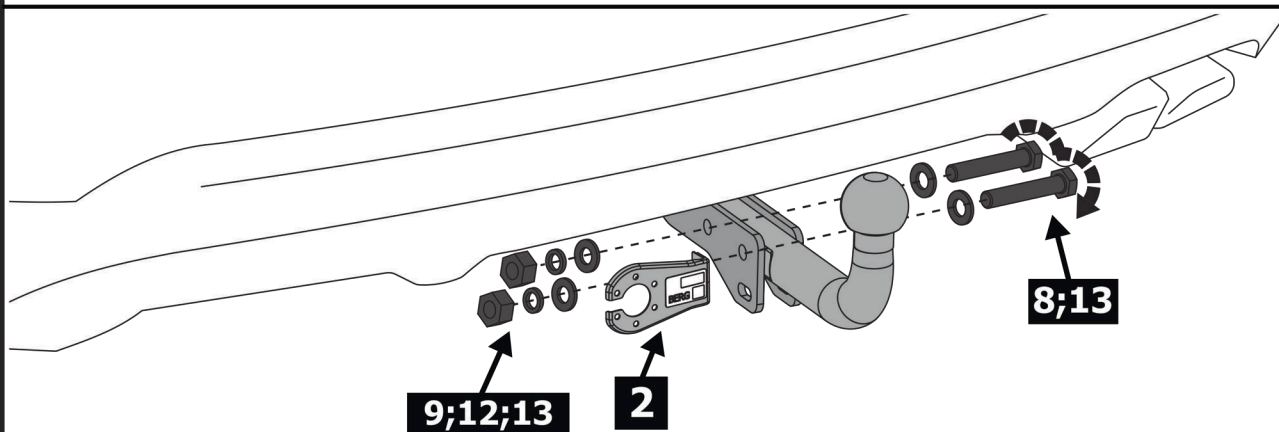

16



Затянуть все резьбовые соединения
M10 = 47 Nm M12 = 81 Nm